



La Cornue 1908

# HOTTES

HOOD, ABZUGSHAUBEN, AFZUIGKAP,  
CAPPÀ, CAMPANA

**LIGNES CHÂTEAU, CORNUCHEF, CORNUFÉ**

**HOTTE La Cornue Manuel d'utilisation et d'entretien**

**HOOD La Cornue Users Guide**

**ABZUGSHAUBEN La Cornue Bedienungsanleitung**

**AFZUIGKAP La Cornue Gebruik en Onderhoud**

**CAPPÀ La Cornue Manuale d'Uso e Manutenzione**

**CAMPANA La Cornue Instrucciones de Uso**





L a C o r n u e 1 9 0 8

Ateliers La Cornue

14, rue du Bois du Pont - Z.I. les Béthunes  
95310 Saint-Ouen l'Aumône - FRANCE

Adresse postale : La Cornue SAS - B.P. 99006  
95070 Cergy Pontoise Cedex - FRANCE

Tél. : + 33 (0)1 34 48 36 36 - Fax : + 33 (0)1 34 64 32 65

E-mail : a.table@la-cornue.com

w w w . l a - c o r n u e . c o m

# LA CORNUE HOOD

# USERS GUIDE

## CHÂTEAU, CORNUCHEF, CORNUFÉ LINES



LA CORNUE HEADQUARTERS AND WORKSHOP  
14, rue du Bois du Pont - Z.I. Les Béthunes  
95310 SAINT OUEN L'AUMONE

Postal address:

BP 99006 - 95070 Cergy Pontoise Cedex  
FRANCE

Téléphone : 33 (0)1 34 48 36 36

Fax : 33 (0)1 34 64 32 65

**[www.la-cornue.com](http://www.la-cornue.com)**

e-mail : [a.table@la-cornue.com](mailto:a.table@la-cornue.com)

# CONTENTS

	Pages
WARNINGS .....	3
INSTRUCTIONS FOR USE .....	4
1. Control panel .....	4
2. Remote control (option) .....	5
MAINTENANCE AND CLEANING .....	5
1. Filters .....	5
2. Lighting .....	6

Dear Customer,

Thank you for choosing to purchase a La Cornue hood.

The aim of this guide is to familiarise you with the potential of a professional-quality appliance designed for domestic use, and to facilitate its upkeep.

Above all, a La Cornue hood is manufactured from noble and pure materials. The specific choices for these materials, such as brass or stainless steel, correspond to technicality and professional performance requirements that are not attainable with other materials or protective treatments. We are very much attached to the authenticity of our appliances and we are convinced that you will appreciate them even more as you use them.

Thank you for placing your trust in us.

*Xavier Dupuy*

Chairman

All of the characteristics are provided for information purposes only. With the aim of constantly improving its production quality, La Cornue may make modifications to its appliances in line with technological developments.

## WARNINGS

**Read the guides before installing and using this appliance.**

**We decline any responsibility for damage or fires caused by the device if the installation and user guides are not observed.**

Keep these guides with your device. If the device has to be sold or transferred, the new user shall be informed of its operation and any important warnings.

This device may not be used by children or disabled persons without the presence of an adult.

Never flambé food under the hood or leave a gas burner alight without a container. Any flames entering the hood may damage the filters and cause a fire.

Frying food must be monitored attentively. Overheated oils and greases can catch fire.

Clean the appliance regularly according to the indications given in the “Maintenance and Cleaning” chapter

 
**Always adapt the aspiration rate to the type of cooking. It is not always necessary to set the hood to maximum power.** Use the maximum power when cooking chips or grilled meats, but minimum or medium power will suffice for stews.

When you are cooking food that releases a lot of steam and smoke (grilled meats...), remember to switch on the hood 5 minutes before you start cooking and let it run for 5 minutes after you are finished cooking.

# INSTRUCTIONS FOR USE

## I. CONTROL PANEL

La Cornue hoods are equipped with a control panel with an electronic regulator for adjusting the aspiration rate.

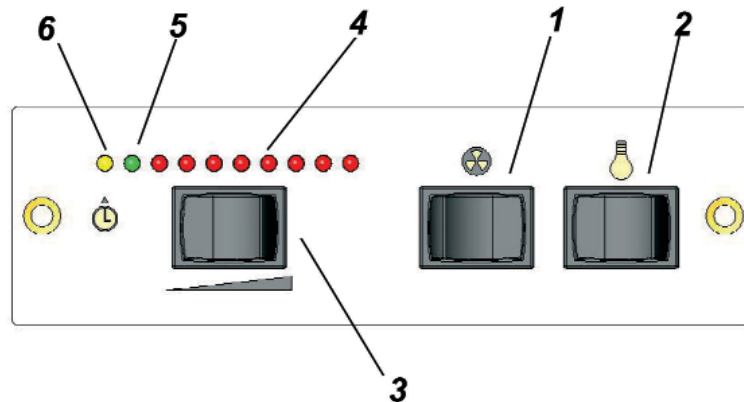

1. Motor ON/OFF button
  2. Light ON/OFF button
  3. Aspiration power setting button
- Operation indicators:
4. Red: Ventilation power
  5. Yellow: Delayed ventilation activated
  6. Green: Delayed ventilation completed

To switch on the motor, press the right side of the motor ON/OFF button (1); the motor starts at approx. 2/3 of its maximum power. The red LEDs light up. You can choose a lower or higher power setting with the power setting button (3).

If you press the right side of the power setting button (3), you increase the ventilation power indicated by the red LEDs above it. If you press the left side of the button, you reduce the power. If you continue to press the left side, the yellow LED will light up; you have now delayed ventilation for 15 minutes after the end of cooking. The delayed ventilation will stop automatically after 15 minutes and the green LED will then light up.


Pressing on the left side of the motor ON/OFF button (1) stops the motor and the operation indicators.

You can switch on or stop the hood lighting with the light ON/OFF button (2).

**2. REMOTE CONTROL (OPTION)**

 The hood functions and the motor power can be controlled by a remote control. The remote-control buttons provide you with the same operating functions as the control panel.

- Button 1: Motor ON/OFF
- Button 2: Reduces aspiration power  
Delayed ventilation
- Button 3: Increases aspiration power
- Button 4: Light ON/OFF
- 5: Battery compartment

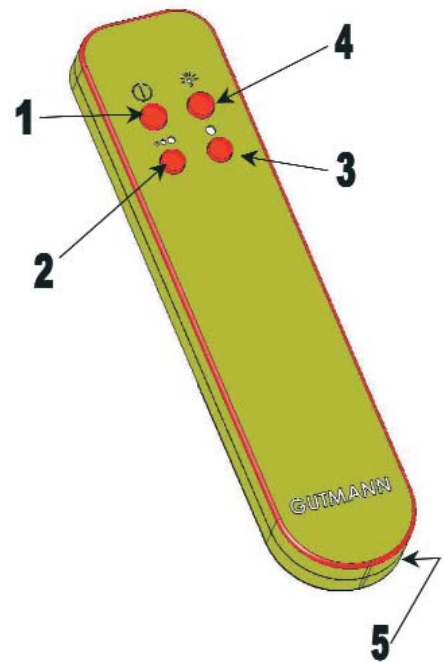


Only use AA-type batteries

**MAINTENANCE AND CLEANING**

 **Always disconnect the appliance before performing maintenance or cleaning. Clean the filters regularly to prevent any fire hazards.**

**I. FILTERS**

Please switch off the lights and stop the motor before you remove the filters. The filters are equipped with a magnetic closure; you just have to pull them downwards to remove them. To reinsert them, push them slightly upwards.

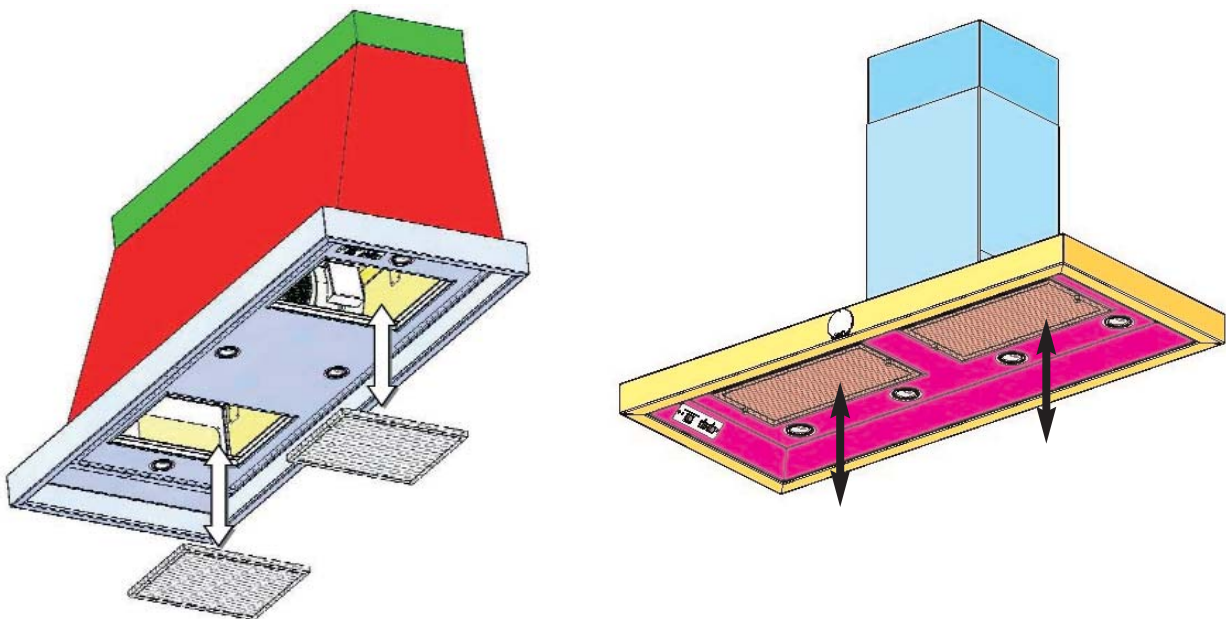

The filters can be washed in the dishwasher every 2 to 4 weeks, depending on the frequency of use. The hood ceiling should be degreased from time to time with white spirit on kitchen roll; it is preferable to perform this operation with the windows open. The bulbs can also be cleaned with methylated spirits or white spirit, after cooling. We would like to remind you that your cooker will not become dirty as quickly if you switch on your hood as soon as you start cooking.

## 2. LIGHTING

Please note: As soon as one of the bulbs in the hood stops working, we strongly advise you to replace it as quickly as possible, as the other bulbs may be damaged quickly.

Only replace the bulbs with identical bulbs of the same power rating. To do so, remove the glass frame (1) with a small screwdriver and then remove the bulb. Insert the new bulb, taking utmost care not to touch it with your fingers but only with a clean, dry and grease-free cloth. Reposition the glass frame in place.

